

WEITZNER

Hanging Instructions

Impasto W1090

Do not cut or install until you have read these instructions. Weitzner recommends hiring a professional wallcovering installer. For a list of professional installers, please visit www.wallcoveringinstallers.org
View the hanging instructions video at www.weitznerlimited.com/videos/papers

WALLCOVERING PREPARATION:

- Do you have the right amount of wallcovering yardage? If not, stop and contact your local sales representative.
- Make sure your tools, hands and workspace are clean.
- Never crease the wallcovering, and avoid touching the face.
- Inspect the wallcovering before installing to ensure it is free from defects.
- Install a **maximum of 3 sheets**, then inspect application. If satisfactory, continue. If not, discontinue and contact your local sales representative.

WALL PREPARATION:

- Make sure the surface you are hanging on has been properly prepared.
- Walls should be clean, smooth, dry and structurally sound.
- Repair any holes or flaws in the walls prior to installing wallcovering.
- We recommend priming walls before installing the wallcovering using Zinsser® Shieldz® or equivalent wallcovering-specific primer.
- Do not hang wallcovering directly on an oil-based primer.

ADHESIVE:

- We recommend Roman® 838 or equivalent clear, non-strippable, starch-based adhesive.
- It is advisable to apply adhesive to the back of the wallcovering using the booking method, allowing 3 to 5 minutes for proper set-up time.

TRIMMING:

- The edges of this wallcovering are factory trimmed.
- We recommend trimming a clean, straight edge on your work table and butting the seams of this wallcovering.
- We do not recommend double cutting any of our handmade papers.
- Trim material at the ceiling, baseboard, windows and doors with a single-edged razor blade.
- Always use a new, very sharp blade for each cut.

REPEAT:

- W 36" H 13"
- This wallcovering is not intended to match at the seams and should panel when installed.

CONTINUED >

Weitzner assumes no responsibility for installation of material beyond 3 sheets and will not be held responsible for labor under any circumstances. For any questions, contact your local representative.

W E I T Z N E R

Hanging Instructions

Impasto W1090

Do not cut or install until you have read these instructions. Weitzner recommends hiring a professional wallcovering installer. For a list of professional installers, please visit www.wallcoveringinstallers.org
View the hanging instructions video at www.weitznerlimited.com/videos/papers

RECOMMENDATIONS:

- If you decide to hang multiple drops of this wallcovering, they should be trimmed and hung as they are unrolled or hung in style directed by interior designer. It is not recommended to reverse hang this wallcovering.

CARE INSTRUCTIONS:


- Liquid stains should be removed immediately by blotting with a clean, damp, white cloth. Regular vacuuming with a soft brush attachment may be used to remove dust deposits.

CONTINUED >


Weitzner assumes no responsibility for installation of material beyond 3 sheets and will not be held responsible for labor under any circumstances. For any questions, contact your local representative.

WEITZNER

IMPASTO W1090

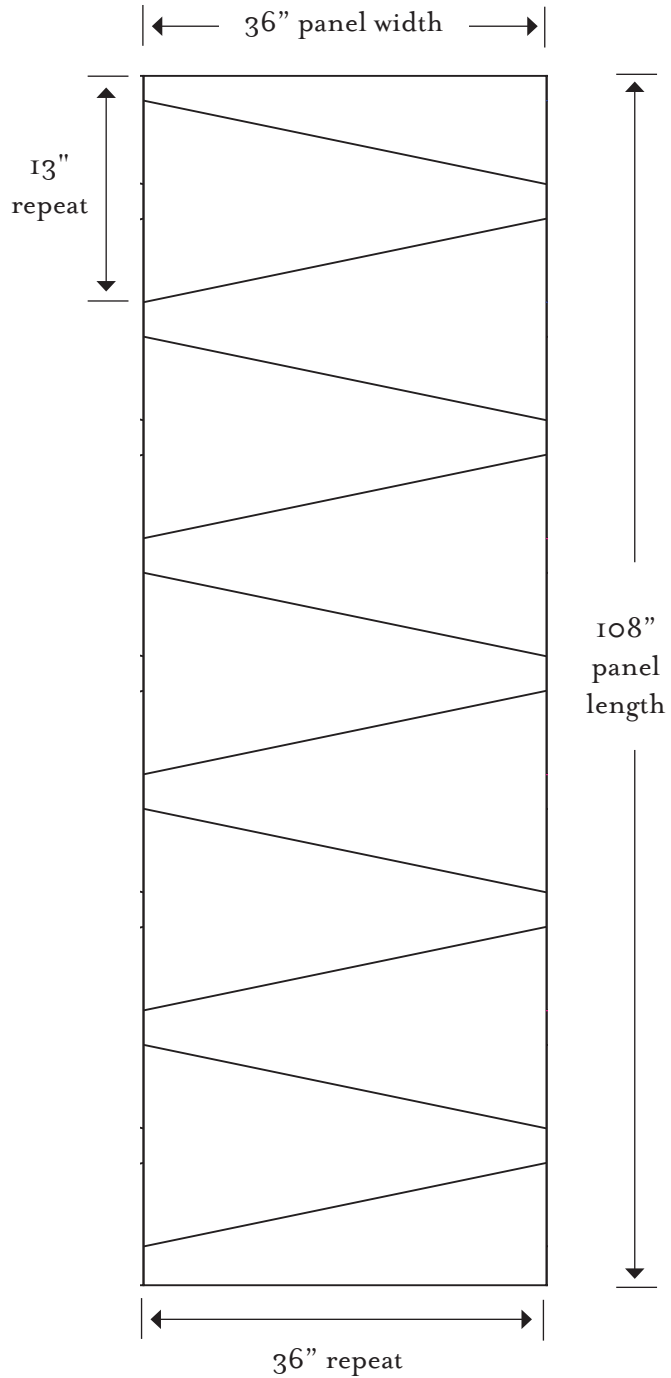

Impasto is designed to panel without side-matching.

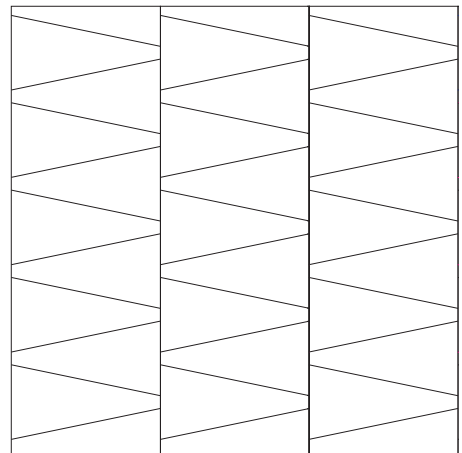

Example diagram shows 3 panels across.